


## Cover Assemblies, Main Plates, Thrust Bearing, Pilot Bearing

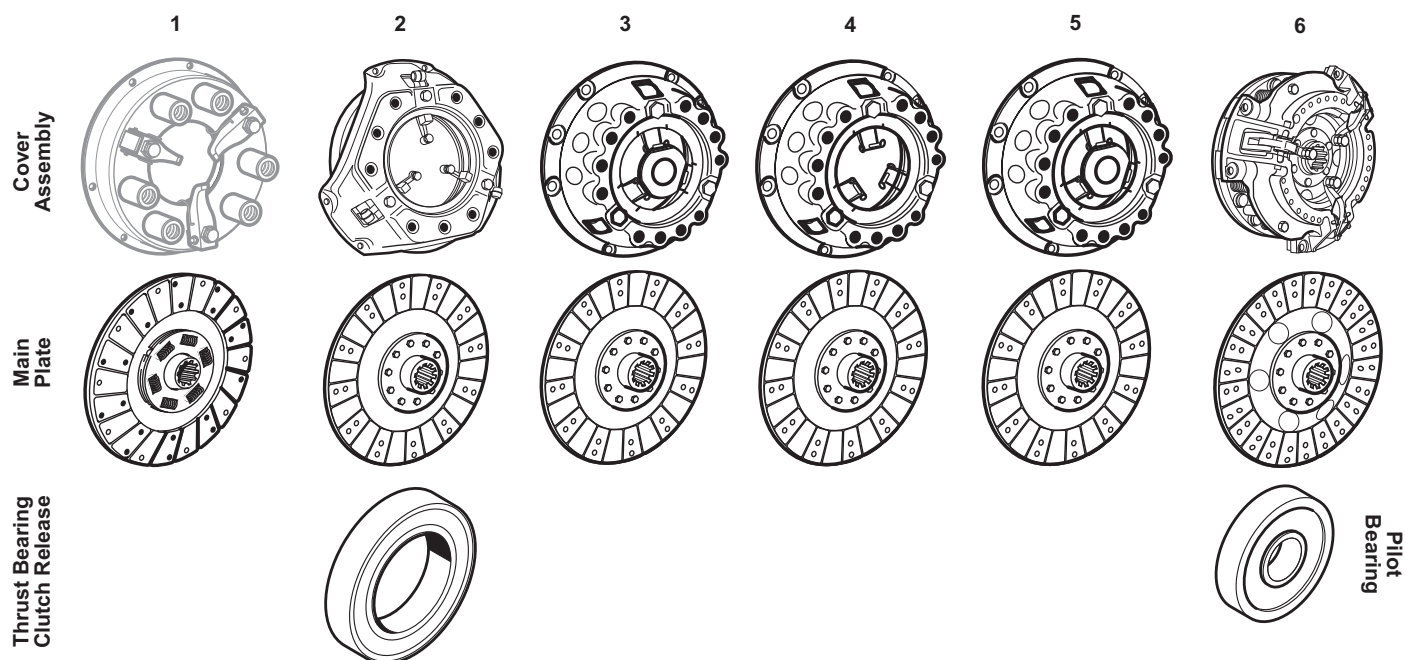

	TRACTOR MODEL	COVER ASSEMBLY	MAIN PLATE	MAIN PLATE DIMENSIONS/ins.	P.T.O. PLATE DIMENSIONS/ins.	RELEASE BEARING	PILOT BEARING
1	TO20 TO30 TO35 Z120, 129, 134		R60693 180241M91 181114M91	OD x Hub x Splines (9" x 1 3/8" x 10")	OD x Hub x Splines	R65334 4069 501608 195207M1	R40734 828123M1 832960M3
2	TEA20 80, 85mm Gas	R60692	R60693 180241M91 181114M91	(9" x 1 3/8" x 10")		R65334 4069 501608 195207M1	R40734 828123M1 832960M3
3	TEF20 20C Diesel	R72898 8780 w/ Thrust Plate 10" Single	R42168 8778	(10" x 1 3/8" x 10")		R65334 4069 501608 195207M1	R40734 828123M1 832960M3
4	FE35 87mm Gas	R72900 1850837M91 9" Single	R72903	(9" x 1 3/8" x 10")			R40734 828123M1 832960M3
5	FE35 23C Diesel	R72898 8780 w/ Thrust Plate 10" Single	R72780 1851668M1	(10" x 1 3/8" x 10")			
6	TO35 Z134 87mm Gas (->SN177395) (SN177520-177537) FE35 23C 87mm Diesel	R60126 182463M93	R60128	(11" x 1 1/8" x 10")	S.40712 899823M91 3620411M91 (9" x 1 3/4" x 10")	R40735 833084M1	R40734 828123M1 832960M3
6	TO35 Z134 (SN 177395- 177519) (177538->)	R40674 526666M91	R40730 516068M91	(11" x 1 1/8" x 10")			